


### MANUAL

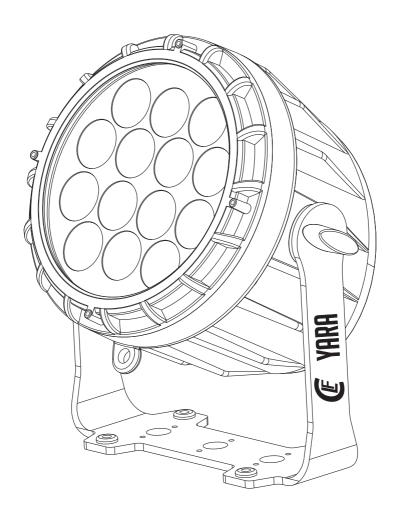



WWW.CLF-LIGHTING.COM V1.0 DECEMBER 2016


## TABLE OF CONTENTS

Dimensions	1
Safety Information	2
Fixture overview	4
Introduction	5
AC power	5
Power voltage	5
Power cables	5
Relaying power to other devices	6
Data link	6
Connecting the data link	6
Tips for reliable data transmission	6
Physical installation	7
Fastening the fixture to a flat surface	7
Setup	8
Control panel and menu navigation	8
DMX address setting	8
Control Mode	8
Static Color options	9
Auto Show options	10
Master / Slave	10
Personality	11
Dimmer Speed	11
Key-Lock	11
Calibration	11
Refresh rate	11
LCD brightness	11
Information	11
Software type	11
Usage time	11
Temperature	11
UID	11
Factory reset	11
DMX protocol	12
Onboard control menus	15
Specifications	16

# **DIMENSIONS**ALL DIMENSIONS ARE IN MILLIMETERS

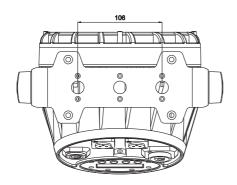

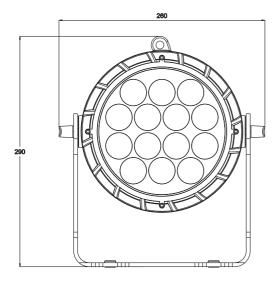

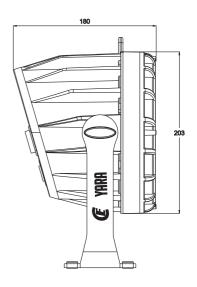

WWW.CLF-LIGHTING.COM 1.0

## SAFETY INFORMATION



#### **WARNING!**

Read the safety precautions in this section before installing, powering, operating or servicing this product

The following symbols are used to identify important safety information on the product and in this manual:



DANGER! Safety hazard. Risk of severe injury or death.



DANGER! Hazardous voltage. Risk of lethal or severe electric shock.



WARNING! Fire hazard



WARNING! LED light emission. Risk of eye injury.



WARNING! Burn hazard. Hot surface. Do not touch



WARNING! Wear protective eyewear.



WARNING! Refer to user



Warning! Risk Group 3 (high risk) LED product according to EN 62471. Do not look into the beam at a distance of less than 3 meters from the front surface of the product. Do not view the light output with optical instruments or any device that may concentrate the beam.

This product is for professional use only. It is not for household use.



 
This product presents risks of severe injury or death due to fire and burn hazards, electric shock and falls.

Read this manual before installing, powering or servicing the fixture, follow the safety precautions listed below and observe all warnings in this manual and printed on the fixture. If you have questions about how to operate the fixture safely, please contact your supplier.



#### PROTECTION FROM ELECTRIC SHOCK

- Disconnect the fixture from AC power before removing or installing any cover or part and when not in use.
- · Always ground (earth) the fixture electrically.
- Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault (earth-fault) protection.



- Power input and through out cables must be rated 20 A minimum, have three conductors 1.5 mm² (16 AWG) minimum conductor size and an outer cable diameter of 5 15 mm. Cables must be hard usage type (SJT or equivalent) and heat-resistant to 90° C minimum.
- Use only PowerCON TRUE ® cable connectors to connect to power input sockets. Use only PowerCON TRUE ® cable connectors to connect to power through put sockets.
- Isolate the fixture from power immediately if the power plug or any seal, cover, cable, or other component is damaged, defective, deformed, wet or showing signs of overheating. Do not reapply power until repairs have been completed.

WWW.CLF-LIGHTING.COM 2.0

#### DO NOT EXPOSE THE FIXTURE TO RAIN OR MOISTURE

- Refer any service operation not described in this manual to a qualified technician.
- Socket outlets used to supply fixture fixtures with power or external power switches must be located near the fixtures
  and easily accessible so that the fixtures can easily be disconnected from power.

 
#### PROTECTION FROM BURNS AND FIRE



- Do not operate the fixture if the ambient temperature (Ta) exceeds 40°C.
- The exterior of the fixture becomes hot during use. Avoid contact by persons and materials.
   Allow the fixture to cool for at least 10 minutes before handling.
- Keep all combustible materials (e.g. fabric, wood, paper) at least 100 mm away from the head.
- Keep flammable materials well away from the fixture.
- Ensure that there is free and unobstructed airflow around the fixture.
- Do not illuminate surfaces within 200 mm of the fixture.
- Do not attempt to bypass thermostatic switches or fuses.
- If you relay power from one fixture to another using power throughput sockets, do not connect more than ten fixture
  fixtures in total to each other in an interconnected chain.
- Connect only other fixture fixtures to fixture power throughput sockets. Do not connect any other type of device to
  these sockets.
- Do not connect any other type of device to these sockets.
- Do not stick filters, masks or other materials onto any optical component.
- . Do not modify the fixture in any way not described in this manual
- . Do not use fixture on a dimmer

#### PROTECTION FROM INJURY







 Do not look at LEDs with magnifiers, telescopes, binoculars or similar optical instruments that may concentrate the light output.




Ensure that persons are not looking at the LEDs from within 3 meters when the product lights up suddenly.
 This can happen when power is applied, when the product receives a DMX signal, or when SERVICE menu items are selected.

- Fasten the fixture securely to a fixed surface or structure when in use. The fixture is not portable when
  installed.
- Ensure that any supporting structure and/or hardware used can hold at least 10 times the weight of all the
  devices they support.
- Allow enough clearance around the head to ensure that it cannot collide with an object or another fixture when it moves.
- Check that all external covers and rigging hardware are securely fastened.
- Block access below the work area and work from a stable platform whenever installing, servicing or moving
  the fixture.
- Do not operate the fixture with missing or damaged covers, shields or any optical component.

WWW.CLF-LIGHTING.COM 3.0

## FIXTURE OVERVIEW

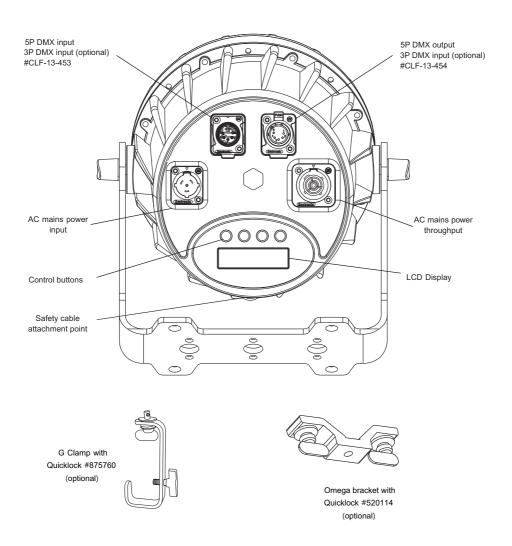

WWW.CLF-LIGHTING.COM 4.0

## INTRODUCTION

#### OUTDOOR RGBW LED FIXTURE AFFORDABLE LIGHTING ESSENTIAL

- UNIQUE BRACKET DESIGN
- TOURING PROOF
- SMOOTH RGBW COLOR MIXING
- IP65 RATING
- SILENT OPERATION
- SMOOTH PROJECTION
- POWERCON TRUE ® IN & OUT
- RDM READY



#### USING FOR THE FIRST TIME

Warning! Read "Safety Information" on page 2 before installing, powering, operating or servicing the fixture. Before applying power to the fixture:

- Check that the local AC mains power source is within the fixture's power voltage and frequency ranges.
- See "Power cables and power plug" on page 7. Install a PowerCON TRUE <sup>®</sup> power input connector on a suitable power cable.

### **AC POWER**



Warning! Read "Safety Information" starting on page 2 before connecting the fixtures to AC mains power.

Warning! For protection from electric shock, the fixture must be grounded (earthed). The power distribution circuit must be equipped with a fuse or circuit breaker and ground-fault (earth-fault) protection.



Warning! Socket outlets or external power switches used to supply the fixture with power must be locatednear the fixture and easily accessible so that the fixtures can easily be disconnected from power.

Important! Do not insert or remove live PowerCON TRUE ® connectors to apply or cut power, as this

Important! Do not use an external dimming system to supply power to the fixture, as this may cause damage to the fixture that is not covered by the product warranty.

may cause arcingat the terminals that will damage the connectors.

The fixture can be hard-wired to a electrical installation if you want to install it permanently, or a power plug that is suitable for the local power outlets can be installed on the power cable.

#### POWER VOITAGE



Warning! Check that the voltage range specified on the fixtures serial number label matches the local AC mains power voltage before applying power to the fixture.

The fixtures accepts AC mains power at 100-240 V nominal, 50/60 Hz. Do not apply AC mains power to the fixture at any other voltage than specified.

WWW.CLF-LIGHTING.COM 5.0

#### **POWERCABLES**

Power input and throughput cables must be rated 20 A minimum, have three conductors 1.5 mm² (16 AWG) minimum conductor size and an outer cable diameter of 5 - 15 mm. Cables must be hard usage type (SJT or equivalent) and heat-resistant to 90°C minimum. In the EU the cable must be HAR approved or equivalent.

If you install a power plug on the power cable, install a grounding-type (earthed) plug that is rated 20 A minimum. Follow the plug manufacturer's instructions. Table 1 shows standard wire color-coding schemes and some possible pin identification schemes; if pins are not clearly identified, or if you have any doubts

Wire Color (EU models)	Wire Color (US models)	Conductor	Symbol	Screw (US)
Brown	Black	Live	L	Yellow or Brass
Blue	White	Neutral	N	Silver
Yellow/Green	Green	Ground (earth)	<b>⊕</b> or <b>±</b>	Green

Wire color-coding and power connections

#### RELAYING POWER TO OTHER DEVICES



Warning! Do not connect more than ten fixtures in total to AC mains power in one interconnected chain. Power can be relayed to another device via the light-grey PowerCON TRUE <sup>®</sup> throughput socket.

If you daisy chain the fixtures in a chain so that they all draw AC mains power via the first fixture, certain points must be respected:

- A heavy duty, three-conductor, 16 AWG or 1.5 mm2 cable with SJT or equivalent cable jacket must be used to connect the first fixture to AC mains power.
- PowerCON TRUE <sup>®</sup> connectors must be used to draw AC mains power from the fixtures power throughput sockets and yellow PowerCON TRUE <sup>®</sup> connectors must be used to supply power at the fixture's power input sockets.
- No matter what the AC mains power voltage is, do not connect more than ten fixture fixtures in total (i.e. including the first fixture) to AC mains power in one interconnected daisy chain using power input and through out connectors.

### DATA LINK

A DMX 512 data link is required in order to control a fixture via DMX. The fixture has 5-pin XLR connectors for DMX data input and output. The pin-out on all connectors is pin 1 = shield, pin 2 = cold (-), and pin 3 = hot (+) Pins 4 and 5 in the 5-pin XLR connectors are not used.

#### TIPS FOR RELIABLE DATA TRANSMISSION

To connect the fixture to data:

- $1. \ Connect the DMX \ data \ output from \ the \ controller \ to \ the \ closest \ fixture's \ male \ 5-pin \ XLR \ DMX \ input \ connector.$
- Connect the DMX output of the fixture closest to the controller to the DMX input of the next fixture and continue connecting fixtures output to input.

WWW.CLF-LIGHTING.COM 6.0

## PHYSICAL INSTALLATION



Warning! The fixture must be either fastened to a flat surface such as a stage or wall, or clamped to a truss or similar structure in any orientation using a rigging clamp.

Warning! If the fixture can cause injury or damage it if falls, attach an approved safety cable to one of the safety cable attachment points on the base (see "Fixture overview" on page 6).

Check that all surfaces to be illuminated are minimum 200 mm. from the fixture, that combustible materials (wood, fabric, paper, etc.) are minimum 100 mm. from the head, that there is free airflow around the fixture and that there are no flammable materials nearby.

#### FASTENING THE FIXTURE TO A FLAT SURFACE

The fixture can be fastened to a fixed flat surface that is oriented at any angle. Check that the surface can support at least 10 times the weight of all fixtures and equipment to be installed on it.



Warning! The supporting surface must be hard and flat or air vents in the base may be blocked, which will cause overheating. Fasten the fixture securely. Do not stand it on a surface or leave it where it can be moved or can fall over. Attach a securely anchored safety cable to the safety cable attachment point (see "Fixture overview" on page 4) if the fixture is to be installed in any location where it may fall and cause injury or damage if the primary attachment fails.

- 1. Block access under the work area. Working from a stable platform, hang the fixture on the truss with the arrow on the base towards the area to be illuminated. Tighten the rigging clamp.
- 2. Secure the fixture against clamp failure with a secondary attachment such as an approved safety cable that is rated for the weight of the fixture using one of the attachment points at the edges of the base (see "Fixture overview" on page 4). Do not use any other part of the fixture as a safety cable attachment point.

WWW.CLF-LIGHTING.COM 7.0

## **SETUP**

Warning! Read "Safety Information" on page 2 before installing, powering, operating the fixture.

#### CONTROL PANEL AND MENU NAVIGATION

The onboard control panel and backlit graphic display are used to set the fixture's DMX address, configure individual fixture settings (personality), read out data and execute service utilities. See "Onboard control menus" on page 14 for a complete list of menus and commands.

Using the control buttons

- To enter the menu select [MODE].
- Press [UP] and [DOWN] to scroll within a menu or adjust values.
- To enter a menu, select a function or apply a selection, press [ENTER].
- To escape a function or move back one level in the menu structure, press [MODE].
- Holding down the "UP" and "DOWN" button for more than 3 seconds, the MENU display rotated 180°.

#### DMX ADDRESS SETTING

The DMX address, also known as the start channel, is the first channel used to receive instructions from the controller. For independent control, each fixture must be assigned its own control channels.

The DMX address is configured using the DMX ADDRESS menu in the control panel. For setting the DMX address press [ENTER] before you can change the adddres.

- In order to check if there is a DMX signal present on the fixture you can easy see that via the big ,DOT' on the main screen and also when the backlight function is switched to off.
- The fixture is fully RDM ready. So when you are using a RDM ready console you can address the unit and read out its complete status. For RDM functions please refer to the ANSI/ESTA E1.20-2006 standard

#### **CONTROL MODE**

Intensity

DMX control mode is selected in the CONTROL MODE menu. The fixture has 6 DMX control modes:

	4ch	6ch	7ch	11ch
Dimmer		<b>~</b>	<b>~</b>	<b>~</b>
RGBW	<b>V</b>	<b>V</b>	<b>~</b>	<b>~</b>
Strobe		<b>~</b>	<b>~</b>	<b>~</b>
CCT			<b>~</b>	<b>~</b>
Macro color				<b>~</b>
Effect				<b>~</b>
Dimmer /Effect speed				<b>~</b>
Function set				<b>~</b>
	LIC	.,		Hel
	HS	V		HSI
Hue	<b>~</b>			<b>V</b>
Saturation	<b>~</b>			<b>V</b>
Value	<b>~</b>	•		

WWW.CLF-LIGHTING.COM 8.0

#### STATIC COLOR OPTIONS

There are three options for static color:

#### **FIXED COLOR**

Several options from combinated RGBW values. Use Up and Down to scroll through the options.

R = Red	RB = Red & Blue	BW = Red & White
G = Green	GB = Green & Blue	RGW = Red, Green & White
B = Blue	RGB = Red, Green & Blue	RBW = Red, Blue & White
W = White	RW = Red & White	GBW = Green, Blue & White
RG = Red & Green	GW = Green & White	RGBW = Red, Green, Blue & White

#### WHITE PRESETS

Easy color choice between 2000K (warm white) to 8000K (cold white)

135 Green	0 Blue	35 White
165 Green	0 Blue	135 White
180 Green	28 Blue	220 White
200 Green	80 Blue	255 White
220 Green	120 Blue	255 White
230 Green	145 Blue	255 White
235 Green	165 Blue	255 White
	165 Green 180 Green 200 Green 220 Green 230 Green	165 Green       0 Blue         180 Green       28 Blue         200 Green       80 Blue         220 Green       120 Blue         230 Green       145 Blue

#### MANUAL COLOR

Mix your own color with each RGBW value seperately.

Red	<000-255>	Dimmer Red
Green	<000-255>	Dimmer Green
Blue	<000-255>	Dimmer Blue
White	<000-255>	Dimmer White

WWW.CLF-LIGHTING.COM 9.0

#### **AUTO SHOW**

The auto function gives 10 auto programs and 10 custom programs RGBW color combinations which are working without any DMX console. Hit [ENTER] to adjust the speed of the Auto program from 1-20.

1) Auto 1	Auto program 1	11) Program 1	pre-program 1
2) Auto 2	Auto program 2	12) Program 2	pre-program 2
3) Auto 3	Auto program 3	13) Program 3	pre-program 3
4) Auto 4	Auto program 4	14) Program 4	pre-program 4
5) Auto 5	Auto program 5	15) Program 5	pre-program 5
6) Auto 6	Auto program 6	16) Program 6	pre-program 6
7) Auto 7	Auto program 7	17) Program 7	pre-program 7
8) Auto 8	Auto program 8	18) Program 8	pre-program 8
9) Auto 9	Auto program 9	19) Program 9	pre-program 9
10) Auto 10	(AUTO program 1-10 cycle)	20) Program 10	pre-program 10

#### MASTER/SLAVE

You can choose between master or slave functioning. The selected mode is visible in the homescreen. If no DMX signal is available the fixture will automatically go to slave mode.

WWW.CLF-LIGHTING.COM 10.0

## **PERSONALITY**

Here you can set all functions for the fixture.

Dimmer Speed	Normal (normal dimming speed )
	Smooth (slowest dimming speed)
KEY-Lock	Locks all the button functions. Standard unlocking password is (MODE+UP+MODE+DOWN+MODE+UP+MODE+DOWN+ENTER)
Calibration	MANUAL calibration mode ON/OFF
	Controls the Flicker frequency of the fixture
D. Cook out	600
Refresh rate	1200
	2400
	4800
LCD brightness	Set the LCD display brightness (1-10)

#### INFORMATION

Software type	Shows software version (Vx.x)
Usage time	Use of time and use time reset (password)
Temperature	LED board current temperature
UID	Shows the unique ID for the RDM protocoll. <0x02E20002xxxx>

#### **FACTORY RESET**

Resets the fixture to its factory default settings.

WWW.CLF-LIGHTING.COM 11.0

## DMX PROTOCOLS

HSV	Function	Value	Setting	Remark
1	Hue	000 - 255	0 - 100%	
2	Saturation	000 - 255	0 - 100%	
3	Value	000 - 255	0 - 100%	

**Note:** In HSV mode, Hue stands for the visible light, such as red, yellow, and cyan, etc. Saturation refers to the dominance of hue in the color; when saturation is at 100%, then the color is at its purest. Value is the color's brightness; when value is at 100%, then the color is at its brightest.

HSI	Function	Value	Setting	Remark
1	Hue	000 - 255	0 - 100%	
2	Saturation	000 - 255	0 - 100%	
3	Intensity	000 - 255	0 - 100%	
4.00			2	
4 CH	Function	Value	Setting	Remark
1	Red	000 - 255	0 - 100%	
2	Green	000 - 255	0 - 100%	
3	Blue	000 - 255	0 - 100%	
4	White	000 - 255	0 - 100%	
6 CH	Function	Value	Setting	Remark
1	Dimmer	000 - 255	0 - 100%	
2	Red	000 - 255	0 - 100%	
3	Green	000 - 255	0 - 100%	
4	Blue	000 - 255	0 - 100%	
5	White	000 - 255	0 - 100%	
6	Shutter	000 - 024 025 - 064 065 - 069 070 - 084 085 - 089 090 - 104 105 - 109 110 - 124 125 - 129 130 - 144 145 - 149 150 - 164 165 - 169 170 - 184 185 - 189 190 - 204 205 - 209 210 - 224 225 - 229 230 - 244 245 - 255	Shutter open Strobe 1 (fast → slow) Shutter open Strobe 2: opening pulse (fast → slow) Shutter open Strobe 3: closing pulse (fast → slow) Shutter open Strobe 4: random strobe (fast → slow) Shutter open Strobe 5: random opening pulse (fast → slow) Shutter open Strobe 6:random closing pulse (fast → slow) Shutter open Strobe 7: burst pulse (fast → slow) Shutter open Strobe 8: random burst pulse (fast → slow) Shutter open Strobe 9: sine wave (fast → slow) Shutter open Strobe 10: burst (fast → slow) Shutter open Strobe 10: burst (fast → slow) Shutter open	

WWW.CLF-LIGHTING.COM 12.0

## DMX PROTOCOLS

7 CH	Function	Value	Setting	Remark
1	Dimmer	000 - 255	0 - 100%	
2	Red	000 - 255	0 - 100%	
3	Green	000 - 255	0 - 100%	
4	Blue	000 - 255	0 - 100%	
5	White	000 - 255	0 - 100%	
6	Shutter	000 - 024 025 - 064 065 - 069 070 - 084 085 - 089 090 - 104 105 - 109 110 - 124 125 - 129 130 - 144 145 - 149 150 - 164 165 - 169 170 - 184 185 - 189 190 - 204 205 - 209 210 - 224 225 - 229 230 - 244 245 - 255	Shutter open Strobe 1 (fast $\rightarrow$ slow) Shutter open Strobe 2: opening pulse (fast $\rightarrow$ slow) Shutter open Strobe 3: closing pulse (fast $\rightarrow$ slow) Shutter open Strobe 4: random strobe (fast $\rightarrow$ slow) Shutter open Strobe 5: random opening pulse (fast $\rightarrow$ slow) Shutter open Strobe 6: random closing pulse (fast $\rightarrow$ slow) Shutter open Strobe 7: burst pulse (fast $\rightarrow$ slow) Shutter open Strobe 7: burst pulse (fast $\rightarrow$ slow) Shutter open Strobe 8: random burst pulse (fast $\rightarrow$ slow) Shutter open Strobe 9:sine wave (fast $\rightarrow$ slow) Shutter open Strobe 10: burst (fast $\rightarrow$ slow) Shutter open	
7	ССТ	000 - 009 010 - 255	No function 8000K - 2000K	

WWW.CLF-LIGHTING.COM 13.0

11 CH	Function	Value	Setting	Remark
1	Dimmer	000 - 255	0 - 100%	
2	Red	000 - 255	0 - 100%	
3	Green	000 - 255	0 - 100%	
4	Blue	000 - 255	0 - 100%	
5	White	000 - 255	0 - 100%	
6	Shutter	000 - 024 025 - 064 065 - 069 070 - 084 085 - 089 090 - 104 105 - 109 110 - 124 125 - 129 130 - 144 145 - 149 150 - 164 165 - 169 170 - 184 185 - 189 190 - 204 205 - 209 210 - 224 225 - 229 230 - 244 245 - 255	Shutter open Strobe 1 (fast → slow) Shutter open Strobe 2: opening pulse (fast → slow) Shutter open Strobe 3: closing pulse (fast → slow) Shutter open Strobe 4: random strobe (fast → slow) Shutter open Strobe 5: random opening pulse (fast → slow) Shutter open Strobe 6:random closing pulse (fast → slow) Shutter open Strobe 7: burst pulse (fast → slow) Shutter open Strobe 8: random burst pulse (fast → slow) Shutter open Strobe 9:sine wave (fast → slow) Shutter open Strobe 10: burst (fast → slow) Shutter open Strobe 10: burst (fast → slow) Shutter open	
7	ССТ	000 - 009 010 - 255	No function 8000K - 2000K	
8	Color wheel	000 - 004 005 - 255	No Function Color wheel rotation effect	
9	Auto program	000 - 009 010 - 019 020 - 029  100 - 109 110 - 119 120 - 129  200 - 255	No function Auto program 1 Auto program 2 Auto program 10 (AUTO 1-10 cycle) Custom program 1 Custom program 2 Custom program 10	
10	Speed	000 1 - 255	No function AUTO Speed or Dimmer Speed	
11	Fixture control settings	000 - 094 095 - 099 100 - 104 105 - 109 110 - 114 115 - 119 120 - 124 125 - 129 130 - 134 135 - 139 140 - 144 145 - 149 150 - 249 250 - 255	No function Manual calibration output mode¹ Raw color output mode¹ No function Normal dimming, speed of changes unrestricted¹ No function Smooth dimming, speed of changes restricted slightly¹ No function 600 Hz Refresh rate¹ 1200Hz Refresh rate¹ 2400Hz Refresh rate¹ 4800Hz Refresh rate¹ No Function illuminate display	<sup>1</sup> , value must be held for 3 seconds to activate.

WWW.CLF-LIGHTING.COM 14.0

## ONBOARD CONTROL MENUS

NO.	Main Menu	Menu level 2	Menu level 3	Remark
1	DMX ADDRESS	<001>		Default 001
2	CONTROL MODE	4CH	1. Red, 2.Green, 3.Blue, 4.White	
		6CH	1. Dimmer, 2.Red, 3.Green, 4.Blue, 5.White, 6.Stro	bbe
		7CH	1. Dimmer, 2.Red, 3.Green, 4.Blue, 5.White, 6.Strobe, 7.CCT	
		11CH	$\begin{array}{l} \text{1. Dimmer, 2.Red, 3.Green, 4.Blue, 5.White} \\ \text{6.Strobe, 7.CCT, 8.Macrocolor, 9.Effect,} \\ \text{10.Speed, 11.Functionset} \end{array}$	Default: 11CH
		HSV	1. Hue 2. Saturation 3. Value	
		HSI	1. Hue 2. Saturation 3. Intensity	
	PERSONALITY	Dimmer Speed	Normal Smooth	Default : Normal
		Key-Lock	ON/OFF	Default : OFF
			No Calibration	
3		Calibration	Red (0-255) Manual Green (0-255) Blue (0-255)	Default: NO CALIBRATION
		Refresh rate	600/1200/2400/4800	Default: 600
		LCD brightness	Level(1 - 10)	
4	STATIC COLOR	Fixed color	R RG RW RBW G RB GW GBW B GB BW RGBW W RGB RGW	Default: RGBW
		White presets	2000K/3000K/4000K/5000K/6000K/7000K/80	000 Default : 6000K
		Manual color	Red (0-255) Green (0-255) Blue (0-255) White (0-255)	Default: Red:255 , Green:255 Blue:255 , White:255
5	AUTO	AUTO (1 - 10)	Speed 0 - 20	Default: AUTO 1
3	A010	Programe (1-10)		Delault . ACTO I
6	EDITOR	Programe (01 - 10)	Red (0-255) Green (0-255) Scene Blue (0-255) (01-30) White (0-255) Strobe (0-20) Time (0-255) Fade (0-255)	Programe 10 has 90 Scenes
7	INFO	Software type	VX.XX	
		Usage time	TOTAL Xxxx hours RESET	Use time reset (password)
		Temperature	XXX°C	
		UID	0x02E2000xxxxx	
8	FACTORY RESET	LOAD		

WWW.CLF-LIGHTING.COM 15.0

## **SPECIFICATIONS**

JI LUII IUII IUIIJ					
Physical					
Length	259mm				
Width	179mm				
Height	290mm				
Weight	3.8 kg without accessories				
Dynamic Efects					
beam angle	15°				
Optics					
Light source	14 pcs high-power LED(RGBW)				
Control and Programming					
Control	DMX				
DMX channels	4 / 6 / 7 / 11 / HSV / HSI				
Setting and addressing	Control panel with backlit LCD graphic display				
Protocol	RDM, USITT DMX512-A				
Control and Programming					
Color	Black				
Housing	High strength die-casting aluminum				
Protection rating	IP 65 (if rubber covers are placed correctly when connectors are not used)				
Installation					
Orientation	Any				
Minimum distance to combustible materials	100 mm. from fixture				
Minimum distance to illuminated surfaces	200 mm. from fixture				
Connections					
AC power input	PowerCON TRUE ® input socket				
AC power throughput	PowerCON TRUE <sup>®</sup> output socket				
DMX data in/out	5 pin locking XLR (3 pin optional)				
Electrical					
AC power	100-240 V nominal, 50/60 Hz				
Maximum total power consumption	105 W				
Power supply unit	Auto-ranging electronic switch mode				
Power consumption, all efects static, zero light output	<15 W				
Power consumption					
120 V, 60 Hz	104 W, PF * 0.994				
240 V, 50 Hz	102 W, PF * 0.943				
* PF = power factor. Measurements made at nominal voltage with all LEDs at full intensity. Allow for a deviation of +/- 10%.					
Cooling	Passive				
Maximum ambient temperature (Ta max.)	40° C				
Minimum ambient temperature (Ta min.)	5° C				
Total heat dissipation (calculated, +/- 10%)	820 BTU/hr.				

WWW.CLF-LIGHTING.COM 16.0





